

Maintenance Sheet

MAINTENANCE

EVERY YEAR PRECONISED

FUSE AND SPRING REPLACEMENT

- To replace the fuse, pull the spring (arrow F) in order to remove it out of its support (45 daN strain)
- Check spring is coming back to its original position, if not, replace the spring with a new one.
- Remove the old fusible and replace it by a new one.
- Assemble in the opposite way.

TIGHTENING

- Check the cable clamp is correctly tightened on the cable.

DESIGNATION	CODE
set of 5 fuses	11.11.20.91.00

